

Figure 1

10003925-103001

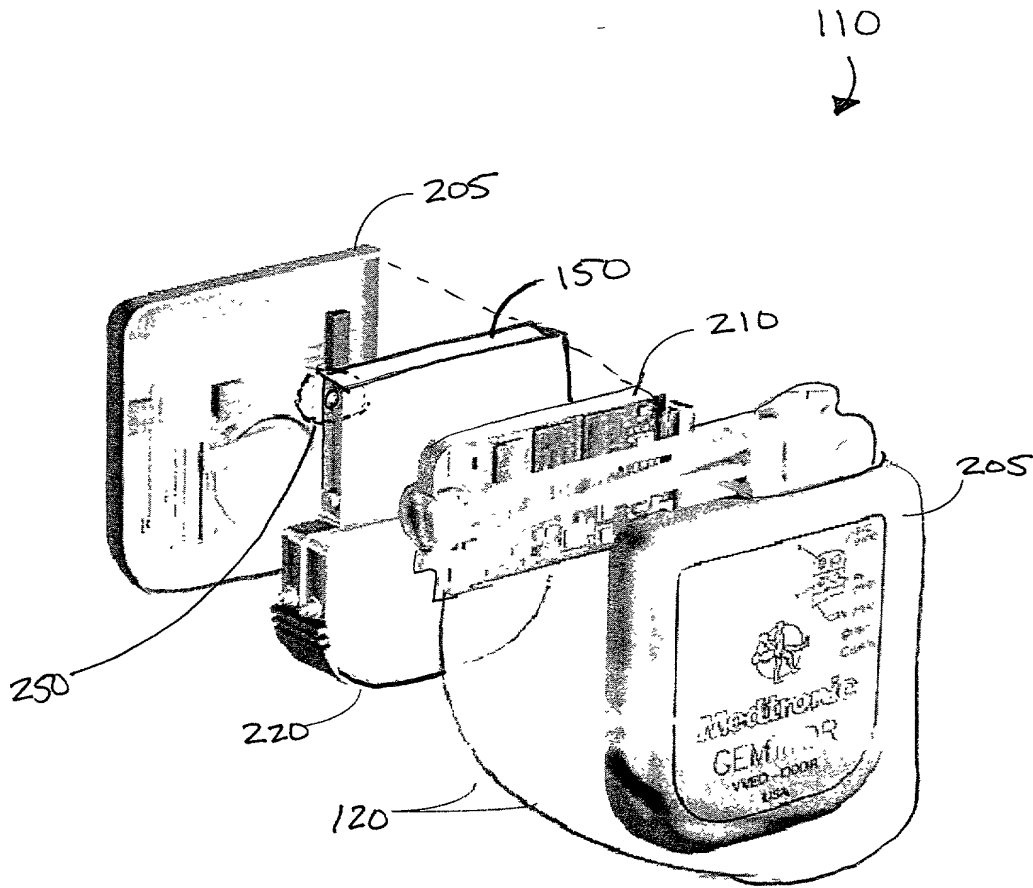


Figure 2

150

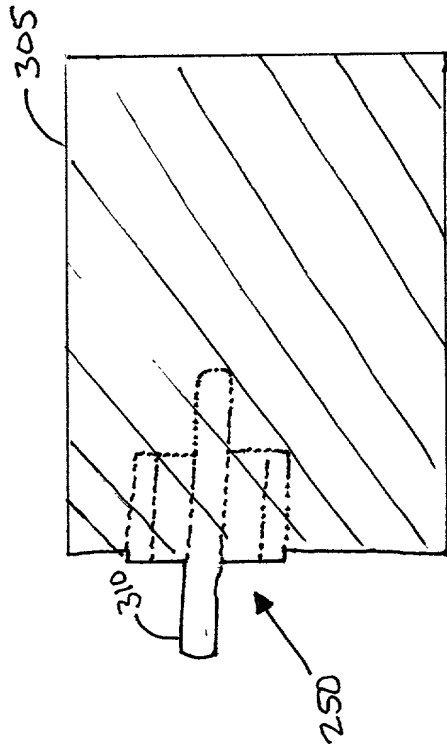


FIGURE 3

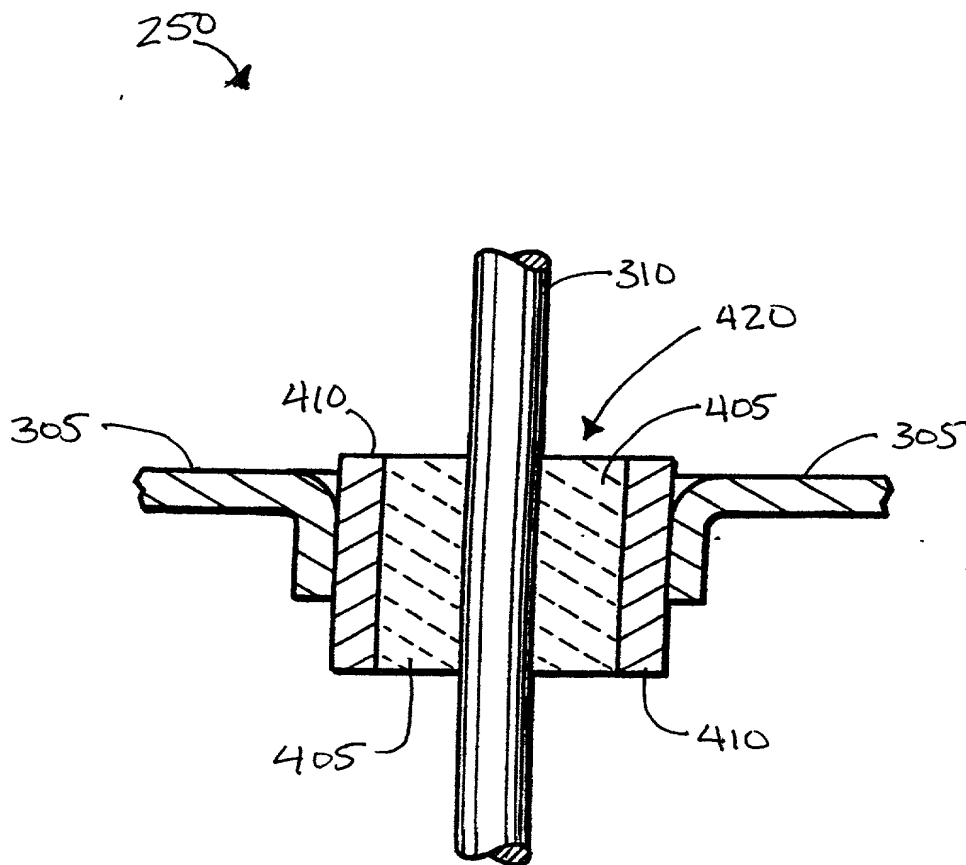


FIGURE 4

500



Attach ferrule sleeve to battery housing

505



Place battery housing and ferrule sleeve combination
over and around glass preform

510



Heat feedthrough arrangement in furnace

515

FIGURE 5